

Update Printer Settings

Introduction

The new ID station paper and ribbon requires an update of your printer. The tool to do this can be downloaded from the www.IDstation.eu website. For some customers that do not have access to internet an SD card is added to the paper .



Step 1 : Download the tool or Insert SD card

If you have access to internet browse to www.idstation.eu/downloads. Click on PrinterUpdate Tool. A ZIP file will be saved on your system. Unzip the file. If you have a card, insert the SD card into your ID station. If you want you can use the USB reader for your Eye-Fi card for this. Otherwise insert the SD card in the SD card reader of your ID station. Open the SD card to view the contents:

Step 2 : Start the UpdatePrinter Tool

Start the **UpdatePrinter** tool by double clicking on it. Make sure the printer is connected and switched ON. If the printer is not on-line the tool will report this and will allow you to try again.

First update the firmware. **This takes a minute or two!** During that time do not close the program, switch off the printer or computer.

If the update process is finished you will be asked to continue with updating the color settings.

Step 3 : Adjust Colors

Click on the button "Update Color Settings" to update the color settings of the printer. Afterwards click on Exit and Close the tool by clicking on Update. That's all!